


How to Set Up Weather Underground®

Syncing weather station data from [WeatherMaster™](#) or the [Weather MicroServer™](#) to Weather Underground is an easy way to share and view your weather station information online. Weather Underground comes with many monitoring features, and allows you to view data from stations around the world.

Some of the features available include real-time monitoring, data maps, historical data and graphs, weather cams, and radar. You can also access these features from an iPhone or Android device through their app.

A Weather Underground account and Station ID number are required before you can link your weather station.

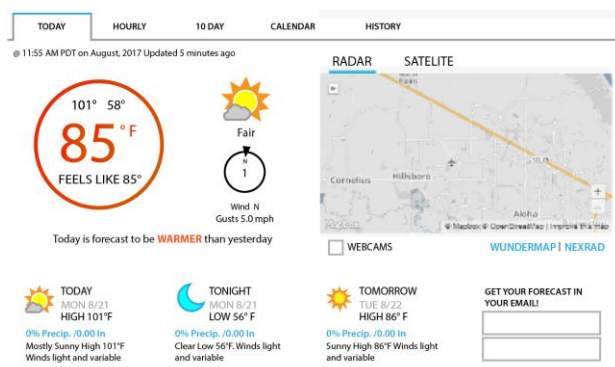

Creating a Weather Underground Account

- Create an account by visiting Weather Underground at <https://www.wunderground.com/signup>.
- Go near the bottom of their homepage. Under GET STARTED click *Connect Now*, or click this [Link](#)
- Walk through the steps outlined by entering in the appropriate information.
- Once you submit, you will receive a Station ID number.

Data Output

Weather Underground Output:	Disabled	Settings
AnythingWeather Output:	Disabled	Settings
CWOP Output:	Disabled	Settings
Daily log file upload:	Enabled	Settings
FTP Output:	Disabled	Settings
Dnp3 Output:	Disabled	Settings
Modbus Output:	Disabled	Settings
Bacnet Output:	Disabled	Settings
SNMP Output:	Disabled	Settings
Diagnostic Logging :	Verbose Logging	Show MIB file

Apply Changes Cancel Changes

Setting Up with the MicroServer

- To connect through the MicroServer click Data Outputs.
- For Weather Underground Output select *Enabled* then click *Settings*.
- Enter the Weather Station ID and Password and click OK.
- Click Apply Changes.

Weather Underground Settings

Selected Weather Station: Hillsboro Orion

Weather Underground Station ID: KORHILLS36

Weather Underground Password: *****

Cancel OK

Setting Up with Weather Master

- To enable the feature in WeatherMaster, click Weather Underground from the OPTIONS MENU.
- Enter your Weather Underground Station ID and password.
- Click OK.
- WeatherMaster will upload the weather data every 5-minutes to Weather Underground.