

How to replace the PTU Module

ORION WEATHER STATION

Note: Avoid contacting the white filter cap with your hands. Handle the PTU module from the plastic connector base. Turn off power before starting.


1. Disconnect Orion sensor connector from cable and remove sensor from the mounting adapter by twisting and pulling up. Be careful not to damage the three ultrasonic wind sensors at the top of the sensor.



2. Loosen the three screws at the bottom of the sensor with the provided allen wrench (or screwdriver with allen adaptor) and slide out completely.

3. Remove the base section and disconnect the flat ribbon cable.

4. Pull out the top of the sensor.

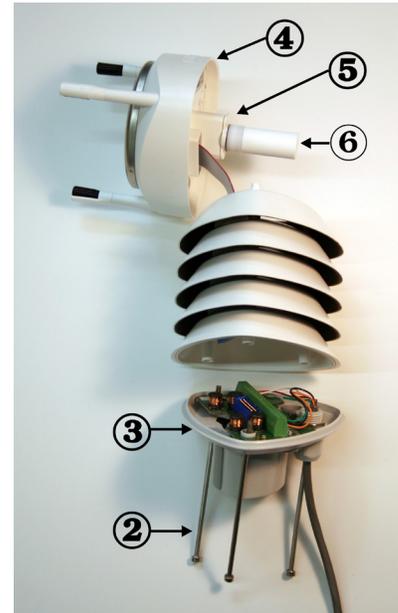

5. Release the small white flap and remove the PTU module.




6. Connect the new PTU module by pushing in firmly. Replace the top, re-connect the flat ribbon cable, replace the base and tighten the three bottom screws.



7. Re-install on mounting adapter and reconnect cable connector.

Scan to watch video tutorial:

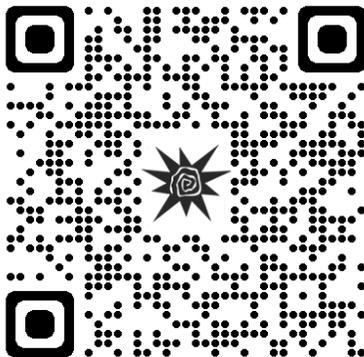

5285 NE Elam Young Pkwy, Suite C100, Hillsboro, OR 97124 | phone 503-629-0887
info@columbiaweather.com | fax 503-629-0898 | ColumbiaWeather.com

©2024 Columbia Weather Systems, all rights reserved. Specifications may change without notice.